

The Obelix Mining PLC I.S. I/O Module provides intrinsically safe (Group I Ex ib) input and output resources in a single, compact unit.

A unique fiber-optic communications interface means that the module and dedicated I.S power supply can be conveniently segregated into its isolated zone.

The fibre-optic link between the module and an Obelix processor module provides real-time control and monitoring of all I/O points.

This solution is ideal for mobile mining equipment where limited installation space must be managed.

Uniquely Keyed Type Connectors to prevent incorrect machine installation.

The module is Dual Obelix Type which complies with AS/NZS 4240 standard.

As per standard every output includes two switches A&B in series with monitoring feedbacks from both.

Extra safety is achieved by using two potted boards where each includes main and watchdog processors monitoring correctness of executed main software code.

Module Primary board - A25\_B0MQP Module Secondary board - A19 A20 B0L3J



Mounting options can vary depending on customer requirements.

## **Specifications**

- Module Type: Intrinsically Safe Input / Output with Display
- Supply: 12VDC (+/- 10%) / 20 Watts (Max) from Approved I.S. Power Supply
- **Data Communications:** CAN interface over Obelix Fibre
- Operating Temperature: -20°C to +85°C all industrial components
- Inputs 1: 24 x I.S. Digital Inputs (12VDC)
- **Inputs 2:** 16 x I.S. Analog Inputs (4-20 mA)
- Inputs 3: 16 x I.S. Namur Inputs
- Outputs: 4 x Danfoss Proportional Solenoid Outputs (Supply 12VIS/650mA, Control 3-9V)
- Connector 1: Obelix Fibre
- Connector 2: Obelix A25 (12VDC I.S. Supply and Danfoss Proportional Solenoid Outputs)
- Connector 3: Obelix A19 (12VDC I.S. Supply and Namur Inputs)
- Connector 4: Obelix A20 (Digital Inputs and Analog Inputs)


## **Heavy Duty Enclosure**

- Electroless Nickel Plated
- Rugged Construction

#### Mass

• 6.5kg (14.3lb)



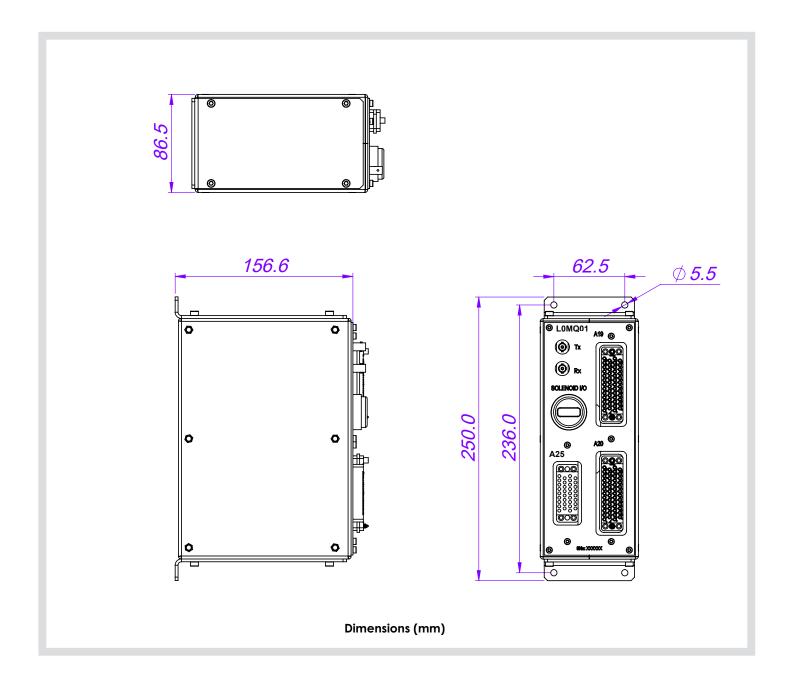



## **Display Diagnostics**

The integral 4 characters LED Matrix display provides the end-user with some basic diagnostics as to the operation of the module. These messages are as follows:

## **Message Explanation Result**

#### ON

Omni Flashing Indicates nominal operation and signifies that CAN communications have been established with a host. Normal Operation Permitted

#### CAN

This indicates CAN Communication has not been established or has been lost. Outputs Disabled

#### FFRK

This indicates that internal is NOT congruent with requested outputs. This typically occurs when output has been requested but has failed to operate indicating a supply failure or wiring error. Outputs Disabled

#### SHRT

This indicates that a short-circuit condition has been detected as a requested output. This short-circuit could be external (most probable) or internal Outputs Disabled

#### **OPEN**

This indicates that the requested output is not drawing sufficient current to operate as expected indicating that the solenoid coil is an open circuit. Outputs Disabled





### **CONNECTOR A19**

SMCTSOF Female Board Mount PIN   Name	Number	Unit / PCB	L0MQ0101
1	Nomber	GMCT50F Female Board Mount	
2 B ANALOG-1 3 C SUPPLY-PROX-SW-2 4 D ANALOG-2 5 E SUPPLY-PROX-SW-3 6 F ANALOG-3 7 H 8 J 9 K SUPPLY-PROX-SW-4 10 L ANALOG-4 11 M 12 N 13 P SUPPLY-PROX-SW-5 14 R ANALOG-5 15 S 16 T 17 U SUPPLY-PROX-SW-6 18 V ANALOG-6 19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a a 24 b b 25 c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-13 37 f SUPPLY-PROX-SW-13 38 U ANALOG-13 39 V 40 W 41 X SUPPLY-PROX-SW-14 42 Y ANALOG-14 42 Y ANALOG-14 42 Y ANALOG-14 43 z	1		
3 C SUPPLY-PROX-SW-2 4 D ANALOG-2 5 E SUPPLY-PROX-SW-3 6 F ANALOG-3 7 H 8 J 9 K SUPPLY-PROX-SW-4 10 L ANALOG-4 11 M 12 N 13 P SUPPLY-PROX-SW-5 14 R ANALOG-5 15 S 16 T 17 U SUPPLY-PROX-SW-6 18 V ANALOG-6 19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a a 24 b b 25 c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-13 37 t SUPPLY-PROX-SW-13 38 U ANALOG-13 39 v 40 W 41 X SUPPLY-PROX-SW-14 42 y ANALOG-14 42 y ANALOG-14 43 z			
4 D ANALOG-2 5 E SUPPLY-PROX-SW-3 6 F ANALOG-3 7 H H 8 J 9 K SUPPLY-PROX-SW-4 10 L ANALOG-4 111 M 12 N 12 N 13 P SUPPLY-PROX-SW-5 14 R ANALOG-5 15 S 16 T 17 U SUPPLY-PROX-SW-6 18 V ANALOG-6 19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a a 24 b b 25 c c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 t SUPPLY-PROX-SW-13 38 U ANALOG-13 39 v 40 W 41 X SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z			
5 E SUPPLY-PROX-SW-3 6 F ANALOG-3 7 H 8 J 9 K SUPPLY-PROX-SW-4 10 L ANALOG-4 11 M 12 N 13 P SUPPLY-PROX-SW-5 14 R ANALOG-5 15 S 16 T 17 U SUPPLY-PROX-SW-6 18 V ANALOG-6 19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a a 24 b b 25 c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 t SUPPLY-PROX-SW-13 38 U ANALOG-13 9 v 40 w 41 X SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z			
6 F ANALOG-3 7 H 8 J 9 K SUPPLY-PROX-SW-4 10 L ANALOG-4 11 M 12 N 13 P SUPPLY-PROX-SW-5 14 R ANALOG-5 15 S 16 T 17 U SUPPLY-PROX-SW-6 18 V ANALOG-6 19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a a 24 b b 25 C SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 t SUPPLY-PROX-SW-12 36 s ANALOG-13 37 v SUPPLY-PROX-SW-13 38 U ANALOG-13 39 v 40 w 41 X SUPPLY-PROX-SW-14 42 y ANALOG-14			
7 H 8 J 9 K SUPPLY-PROX-SW-4 10 L ANALOG-4 11 M 12 N 13 P SUPPLY-PROX-SW-5 14 R ANALOG-5 15 S 16 T 17 U SUPPLY-PROX-SW-6 18 V ANALOG-6 19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a a 24 b b 25 c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 f SUPPLY-PROX-SW-13 38 U ANALOG-13 39 V 40 W 41 X SUPPLY-PROX-SW-14 42 Y ANALOG-14			
8         J           9         K         SUPPLY-PROX-SW-4           10         L         ANALOG-4           11         M           12         N           13         P         SUPPLY-PROX-SW-5           14         R         ANALOG-5           15         S           16         T           17         U         SUPPLY-PROX-SW-6           18         V         ANALOG-6           19         W         SUPPLY-PROX-SW-7           20         X         ANALOG-6           19         W         SUPPLY-PROX-SW-7           20         X         ANALOG-7           21         Y         SUPPLY-PROX-SW-8           22         Z         ANALOG-8           23         a         a           24         b         b           25         c         SUPPLY-PROX-SW-9           26         d         d         ANALOG-9           27         e         e           28         f         g           29         h         SUPPLY-PROX-SW-10           30         j         ANALOG-11 <t< td=""><td></td><td>·</td><td>7.11.12.2.2.2</td></t<>		·	7.11.12.2.2.2
9 K SUPPLY-PROX-SW-4 10 L ANALOG-4 11 M 12 N 13 P SUPPLY-PROX-SW-5 14 R ANALOG-5 15 S 16 T 17 U SUPPLY-PROX-SW-6 18 V ANALOG-6 19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a a 24 b b 25 c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-13 37 t SUPPLY-PROX-SW-13 38 U ANALOG-13 39 V 40 W 41 X SUPPLY-PROX-SW-14 42 y ANALOG-14 43 Z			
10			SUPPLY-PROX-SW-4
11			
13		М	
14       R       ANALOG-5         15       S         16       T         17       U       SUPPLY-PROX-SW-6         18       V       ANALOG-6         19       W       SUPPLY-PROX-SW-7         20       X       ANALOG-7         21       Y       SUPPLY-PROX-SW-8         22       Z       ANALOG-8         23       a         24       b         25       c       SUPPLY-PROX-SW-9         26       d       ANALOG-9         27       e         28       f         29       h       SUPPLY-PROX-SW-10         30       j       ANALOG-10         31       k         32       m         33       n       SUPPLY-PROX-SW-11         34       p       ANALOG-11         35       r       SUPPLY-PROX-SW-12         36       s       ANALOG-12         37       t       SUPPLY-PROX-SW-13         38       U       ANALOG-13         39       v         40       w         41       x       SUPPLY-PROX-SW-14	12	N	
15	13	Р	SUPPLY-PROX-SW-5
16       T         17       U       SUPPLY-PROX-SW-6         18       V       ANALOG-6         19       W       SUPPLY-PROX-SW-7         20       X       ANALOG-7         21       Y       SUPPLY-PROX-SW-8         22       Z       ANALOG-8         23       a         24       b         25       c       SUPPLY-PROX-SW-9         26       d       ANALOG-9         27       e         28       f         29       h       SUPPLY-PROX-SW-10         30       j       ANALOG-10         31       k         32       m         33       n       SUPPLY-PROX-SW-11         34       p       ANALOG-11         35       r       SUPPLY-PROX-SW-12         36       s       ANALOG-12         37       f       SUPPLY-PROX-SW-13         38       U       ANALOG-13         40       W         41       X       SUPPLY-PROX-SW-14         42       Y       ANALOG-14         43       Z         44       AA <td></td> <td>R</td> <td>ANALOG-5</td>		R	ANALOG-5
17       U       SUPPLY-PROX-SW-6         18       V       ANALOG-6         19       W       SUPPLY-PROX-SW-7         20       X       ANALOG-7         21       Y       SUPPLY-PROX-SW-8         22       Z       ANALOG-8         23       a         24       b         25       c       SUPPLY-PROX-SW-9         26       d       ANALOG-9         27       e         28       f         29       h       SUPPLY-PROX-SW-10         30       j       ANALOG-10         31       k         32       m         33       n       SUPPLY-PROX-SW-11         34       p       ANALOG-11         35       r       SUPPLY-PROX-SW-12         36       s       ANALOG-12         37       t       SUPPLY-PROX-SW-13         38       u       ANALOG-13         y       v         40       w         41       x       SUPPLY-PROX-SW-14         42       y       ANALOG-14         43       z         44       AA <td>15</td> <td>S</td> <td></td>	15	S	
18       V       ANALOG-6         19       W       SUPPLY-PROX-SW-7         20       X       ANALOG-7         21       Y       SUPPLY-PROX-SW-8         22       Z       ANALOG-8         23       a         24       b         25       c       SUPPLY-PROX-SW-9         26       d       ANALOG-9         27       e         28       f         29       h       SUPPLY-PROX-SW-10         30       j       ANALOG-10         31       k         32       m         33       n       SUPPLY-PROX-SW-11         34       p       ANALOG-11         35       r       SUPPLY-PROX-SW-12         36       s       ANALOG-12         37       f       SUPPLY-PROX-SW-13         38       u       ANALOG-13         39       v         40       w         41       x       SUPPLY-PROX-SW-14         42       y       ANALOG-14         43       z         44       AA	16	T	
19 W SUPPLY-PROX-SW-7 20 X ANALOG-7 21 Y SUPPLY-PROX-SW-8 22 Z ANALOG-8 23 a 24 b 25 c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 f SUPPLY-PROX-SW-13 38 U ANALOG-13 39 v 40 w 41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z 44 AA	17	U	SUPPLY-PROX-SW-6
20	18	٧	ANALOG-6
21       Y       SUPPLY-PROX-SW-8         22       Z       ANALOG-8         23       a         24       b         25       c       SUPPLY-PROX-SW-9         26       d       ANALOG-9         27       e         28       f         29       h       SUPPLY-PROX-SW-10         30       j       ANALOG-10         31       k         32       m         33       n       SUPPLY-PROX-SW-11         34       p       ANALOG-11         35       r       SUPPLY-PROX-SW-12         36       s       ANALOG-12         37       f       SUPPLY-PROX-SW-13         38       u       ANALOG-13         39       v         40       w         41       x       SUPPLY-PROX-SW-14         42       y       ANALOG-14         43       z         44       AA	19	W	SUPPLY-PROX-SW-7
22       Z         23       G         24       b         25       C       SUPPLY-PROX-SW-9         26       d       ANALOG-9         27       e         28       f         29       h       SUPPLY-PROX-SW-10         30       j       ANALOG-10         31       k         32       m         33       n       SUPPLY-PROX-SW-11         34       p       ANALOG-11         35       r       SUPPLY-PROX-SW-12         36       s       ANALOG-12         37       t       SUPPLY-PROX-SW-13         38       u       ANALOG-13         39       v         40       w         41       x       SUPPLY-PROX-SW-14         42       y       ANALOG-14         43       z         44       AA	20	Χ	ANALOG-7
23	21	Υ	SUPPLY-PROX-SW-8
24 b 25 c SUPPLY-PROX-SW-9 26 d ANALOG-9 27 e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 f SUPPLY-PROX-SW-13 38 U ANALOG-13 39 v 40 w 41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z	22	Z	ANALOG-8
25	23	а	
26 d ANALOG-9 27 e 28 f 29 h SUPPLY-PROX-SW-10 30 j ANALOG-10 31 k 32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 f SUPPLY-PROX-SW-13 38 U ANALOG-13 39 v 40 w 41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z	24	b	
27	25	С	SUPPLY-PROX-SW-9
28	26	d	ANALOG-9
29       h       SUPPLY-PROX-SW-10         30       j       ANALOG-10         31       k         32       m         33       n       SUPPLY-PROX-SW-11         34       p       ANALOG-11         35       r       SUPPLY-PROX-SW-12         36       s       ANALOG-12         37       f       SUPPLY-PROX-SW-13         38       u       ANALOG-13         39       v         40       w         41       x       SUPPLY-PROX-SW-14         42       y       ANALOG-14         43       z         44       AA	27	е	
30	28	f	
31	29	h	SUPPLY-PROX-SW-10
32 m 33 n SUPPLY-PROX-SW-11 34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 t SUPPLY-PROX-SW-13 38 u ANALOG-13 39 v 40 w 41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z	30	j	ANALOG-10
33	31	k	
34 p ANALOG-11 35 r SUPPLY-PROX-SW-12 36 s ANALOG-12 37 t SUPPLY-PROX-SW-13 38 u ANALOG-13 39 v 40 w 41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z 44 AA	32	m	
35	33	n	SUPPLY-PROX-SW-11
36 s ANALOG-12 37 t SUPPLY-PROX-SW-13 38 U ANALOG-13 39 V 40 W 41 X SUPPLY-PROX-SW-14 42 Y ANALOG-14 43 Z		р	ANALOG-11
37		r	
38 U ANALOG-13 39 V 40 W 41 X SUPPLY-PROX-SW-14 42 Y ANALOG-14 43 Z 44 AA		S	
39 v 40 w 41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z 44 AA	37	t	SUPPLY-PROX-SW-13
40 w 41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z 44 AA		U	ANALOG-13
41 x SUPPLY-PROX-SW-14 42 y ANALOG-14 43 z 44 AA		V	
42 y ANALOG-14 43 z 44 AA		W	
43 z 44 AA			
44 AA		У	ANALOG-14
A5 RR SIDDIV DDOV SW 15			
	45	BB	SUPPLY-PROX-SW-15
46 CC ANALOG-15			
47 DD SUPPLY-PROX-SW-16			
48 EE ANALOG-16			
49 FF OVIS	*		
50 HH 12VIS	50	HH	12VIS





Image depict coding pins required



### **CONNECTOR A20**

© Pempek 1985 - 2022

Number	Unit / PCB	L0MQ0101
	GMST50F Female Board Mount PIN	Name
1	A	INP1
2	В	INP2
3	С	INP3
4	D	INP4
5	E	INP5
6	F	INP6
7	Н	INP7
8	J	INP8
9	K	INP9
10	L	INP10
11	M	INP11
12	N	INP12
13	P	INP13
14	R	INP14
15	S	INP15
16	T	INP16
17	U	INP17
18	V	INP18
19	W	INP19
20	Χ	INP20
21	Υ	INP21
22	Z	INP22
23	а	INP23
24	b	INP24
25	С	
26	d	MODULE SELECT-4
27	е	
28	f	MODULE SELECT-3
29	h	
30	j	MODULE SELECT-2
31	k	
32	m	MODULE SELECT-1
33	n	AN17
34	р	AN18
35	r	AN19
36	S	AN20
37	t	AN21
38	U	AN22
39	٧	AN23
40	W	AN24
41	X	AN25
42	У	AN26
43	Z	AN27
44	AA	AN28
45	BB	AN29
46	CC	AN30
47 48	DD	AN31
48	EE	AN32
	FF	
50	HH	OVIS





Image depict coding pins required



CONNECTOR A25 - 4 x Danfoss Proportional Solenoid Outputs (Supply 12VIS/650mA, Control 3-9V)

Number	Unit / PCB VMCT-34F Female Board Mount	L0MQ0101 Name
1	PIN A	
2	В	12VIS Supply Solenoid 1
3	C	
4	D	OVIS
5	E	
6	F	Control Solenoid 1_3V-9V
7	Н	
8	J	OVIS
9	K	
10	L	12VIS Supply Solenoid 2
11	М	MODULE SELECT-1
12	N	OVIS
13	Р	
14	R	Control Solenoid 2_3V-9V
15	S	MODULE SELECT-2
16	Т	0∨IS
17	U	
18	٧	12VIS Supply Solenoid 3
19	W	MODULE SELECT-3
20	Χ	OVIS
21	Υ	
22	Z	Control Solenoid 3_3V-9V
23	AA	MODULE SELECT-4
24	ВВ	OVIS
25	CC	
26	DD	12VIS Supply Solenoid 4
27	EE	
28	FF	OVIS
29	НН	
30	JJ	Control Solenoid 4_3V-9V
31	KK	
32	LL	OVIS
33	MM	OVIS Supply
34	NN	12VIS Supply





Image depict coding pins required



### Fibre Optic Patch Cables

Part Number	Description
H0LW0401	Fibre Optic Patch ST-ST Multi-Mode
H0M10101	Connector Assembly Fibre 8 way 7m
H0M10201	Connector Assembly Fibre 8 way 10m
H0M10301	Connector Assembly Fibre 8 way 1m
H0M10401	Connector Assembly Fibre 8 way 4m
H0M10801	Connector Assembly Fibre 8 way 8m
H0M10901	Connector Assembly Fibre 8 way 11m
H0M11001	Fibre Optic Patch Assembly 8 way 3m
H0M11201	Connector Assembly Fibre 8 way 12.5m

### **Specifications**

**Product Type:** Pre-manufactured cable assembly **Construction:** Flbre Optic with ST terminations

Connector 1 : Fibre Optic Tx Connector 2: Fibre-optic Rx Pin Type: ST Fibre Plugs

Conductor Type: Multi-mode Fibre-optic

Insulation Rating: N/A

Temperature Rating:  $-40^{\circ \text{C}}$  to  $85^{\circ \text{C}}$ 

### **Connector Assembly**

Part Number	Description
H0MQ0101	Connector Assembly A25
H0MQ0201	Connector Assembly A19
H0MQ0301	Connector Assembly A20

### **Specifications**

**Product Type:** Pre-manufactured cable assembly Construction: Connector with flying leads (pigtail)

Pin Type: Male (Gold-plated)

Conductor Type: PVDF Tinned Stranded Wire

**Insulation Rating:** 600 volts

Temperature Rating: -65 to 105 C

**Recommended Tools:** PVDF / Teflon Insulation Stripping Tool

Cable options can vary depending on customer requirements.



Image above Fibre Optic Patch ST-ST Multi-Mode



